






RETZO

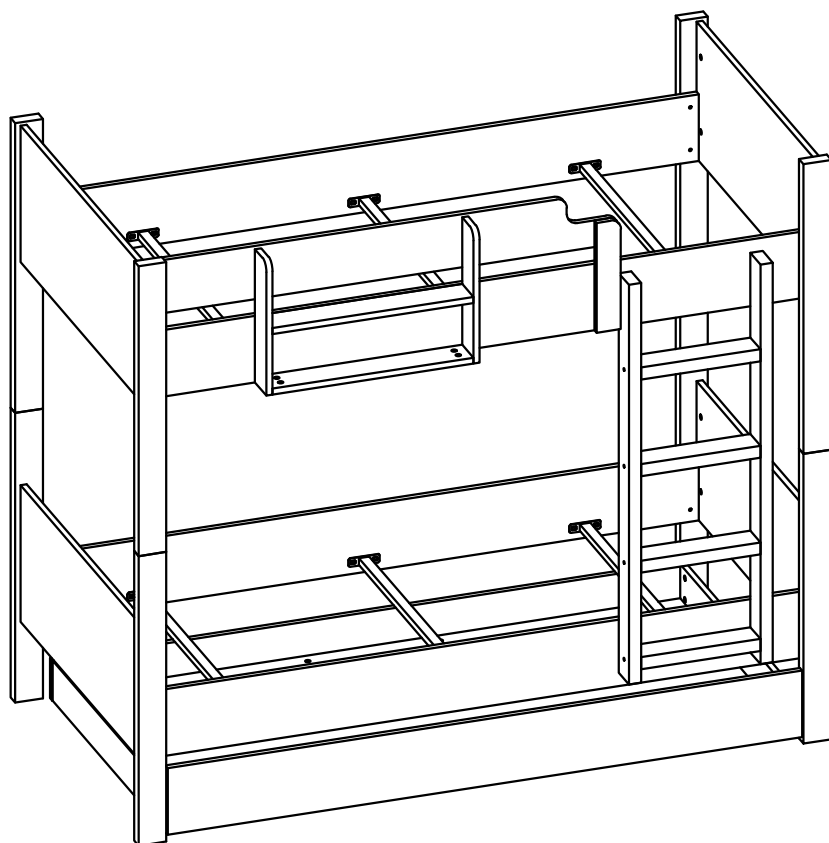

INSTALLATION MUST BE DONE
WITH 2 PERSONS.



TOOLS REQUIRED

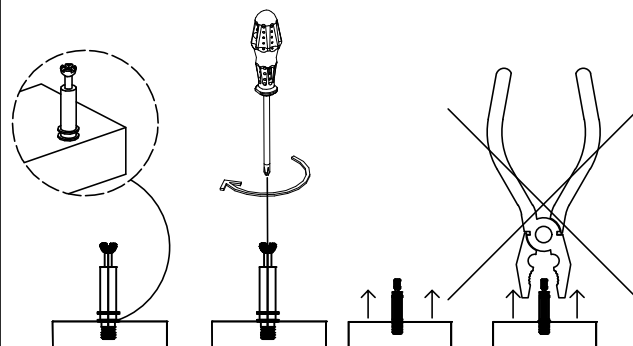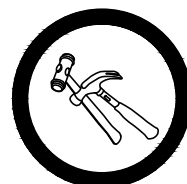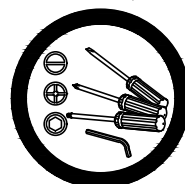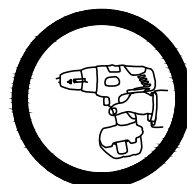


X-01




40 x

X-02



40 x

X-03



52 x

X-04



32 x

X-05




24 x

X-06




(6*30)
24 x

X-07




(3,5x18)
20 x

X-08

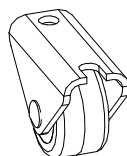


6 x

X-09




4 x

X-10



8 x

X-11

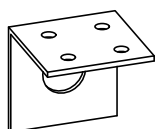


4 x

X-12



4 x



X-13






(6*70)
4 x



X-14

X-15

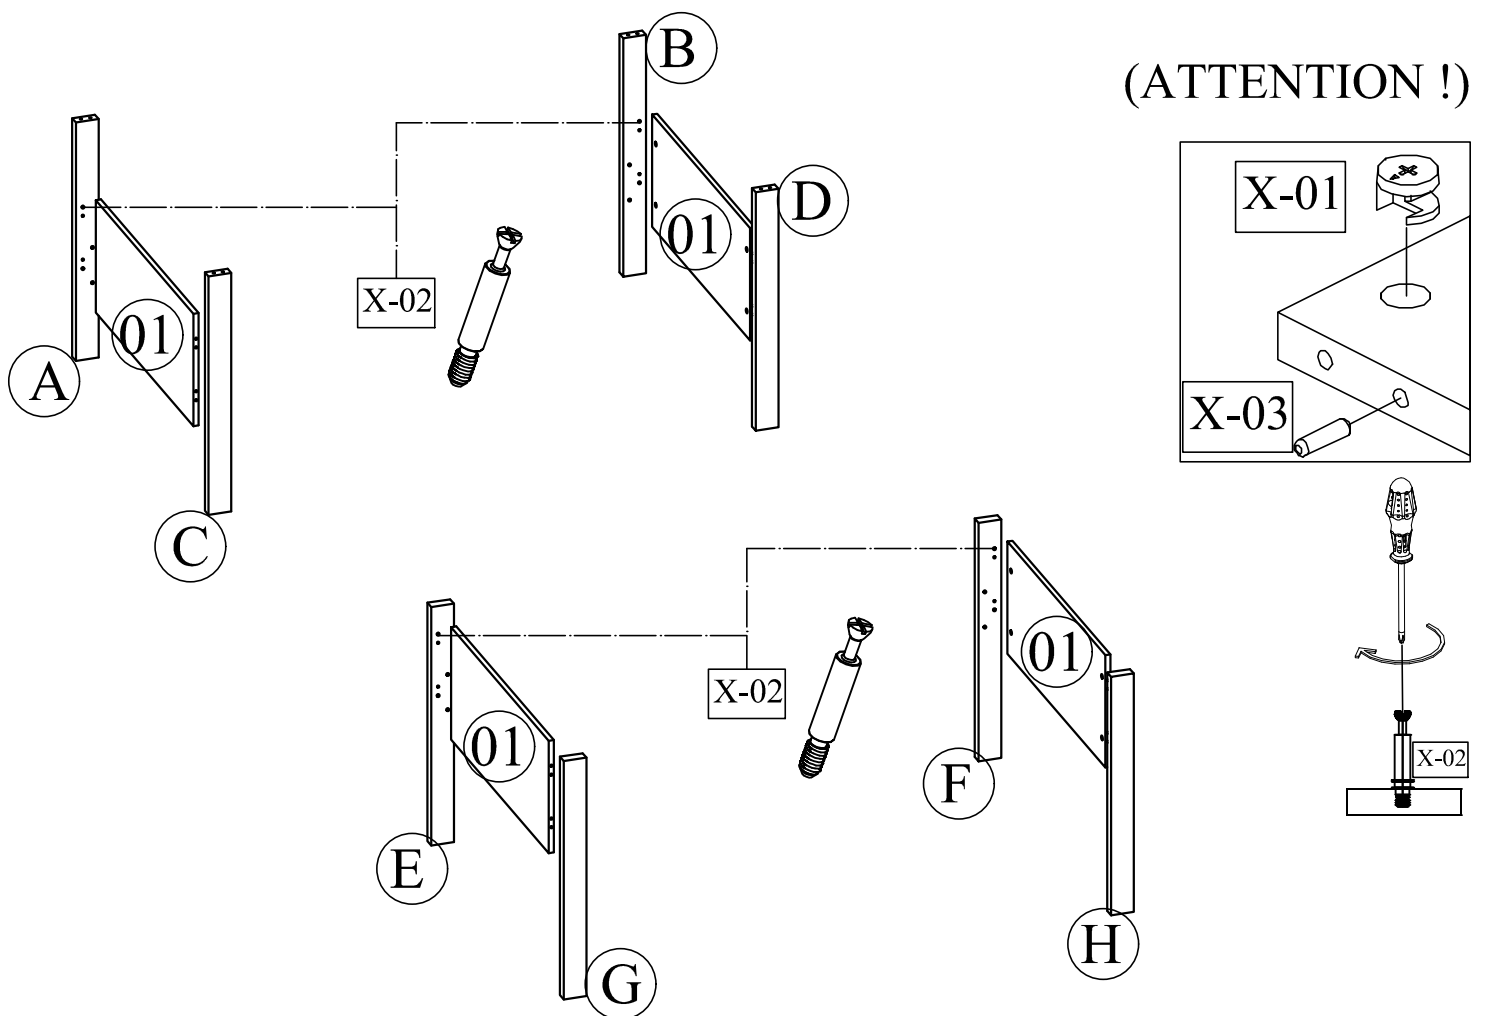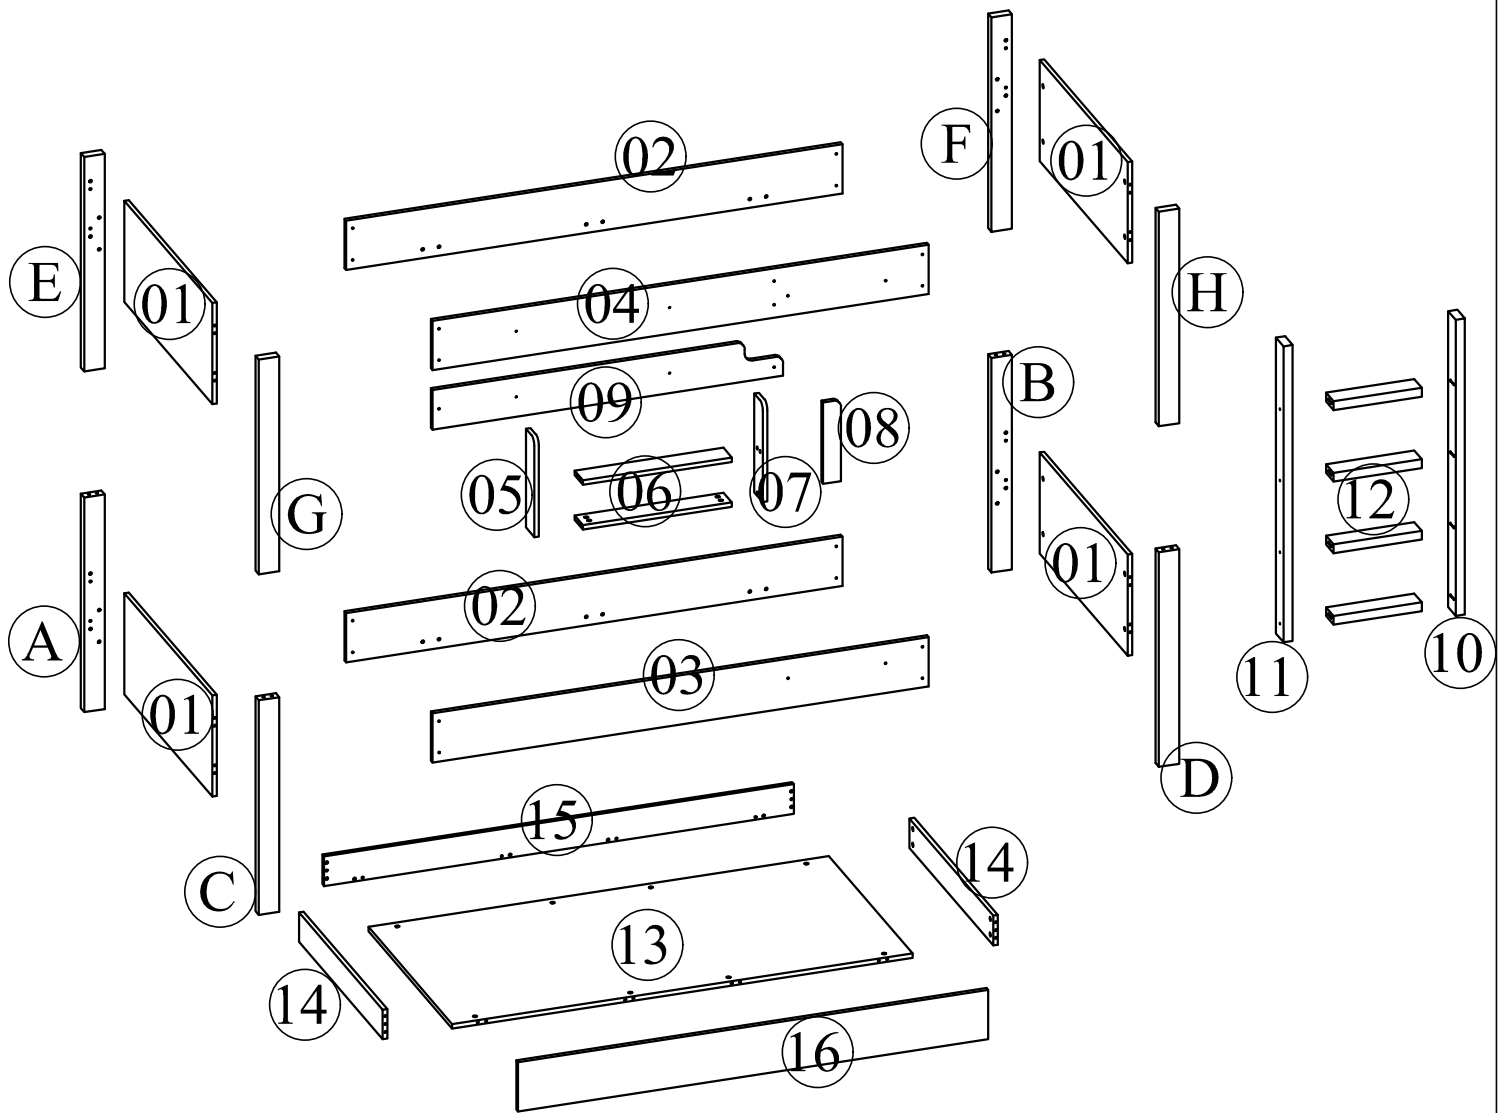


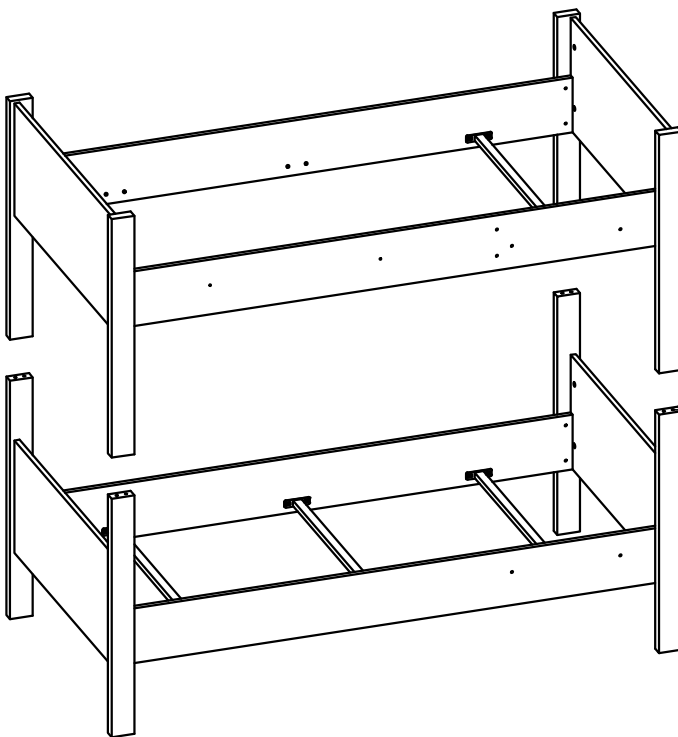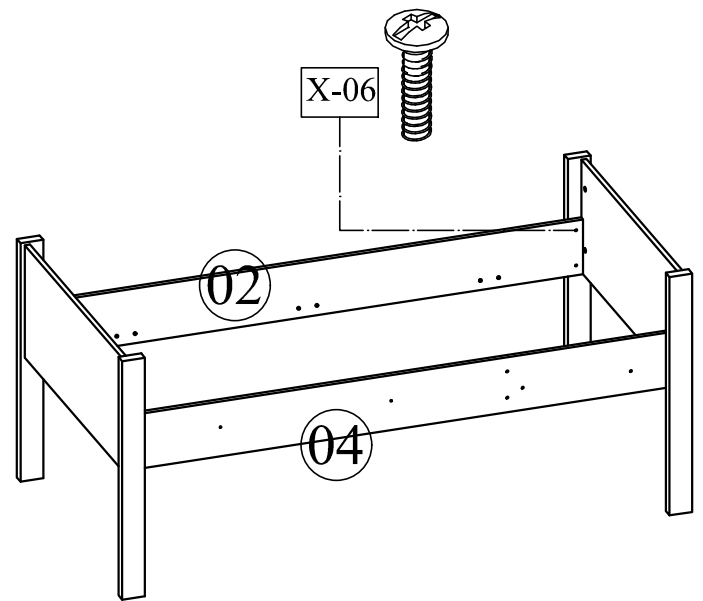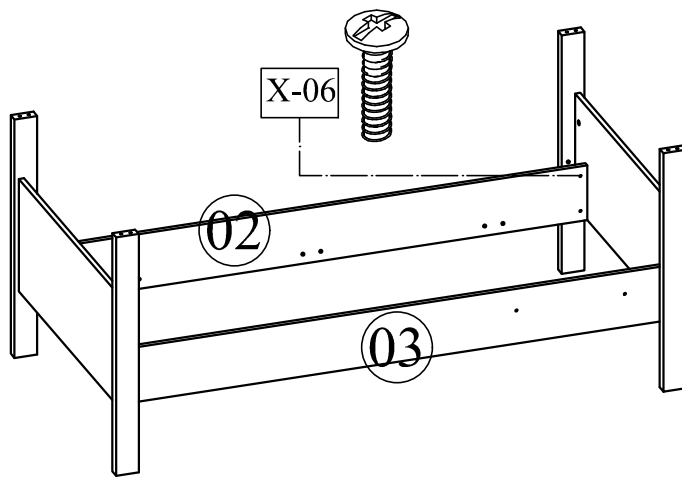


X-03

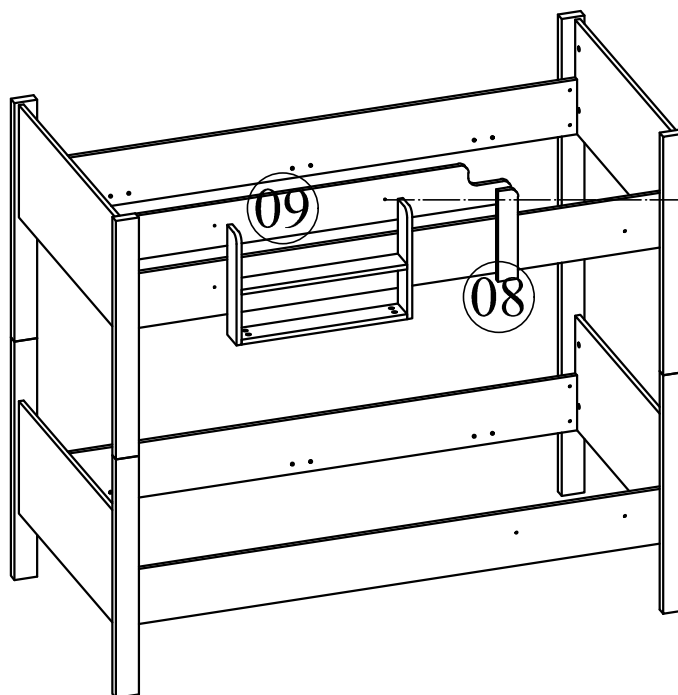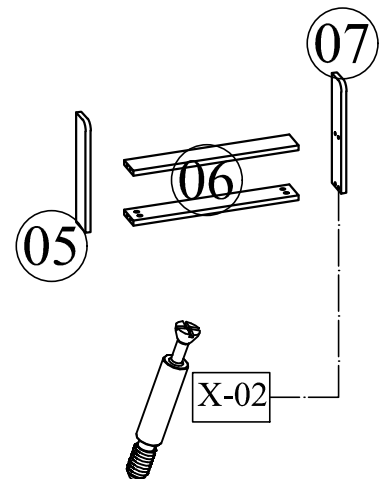

X-09

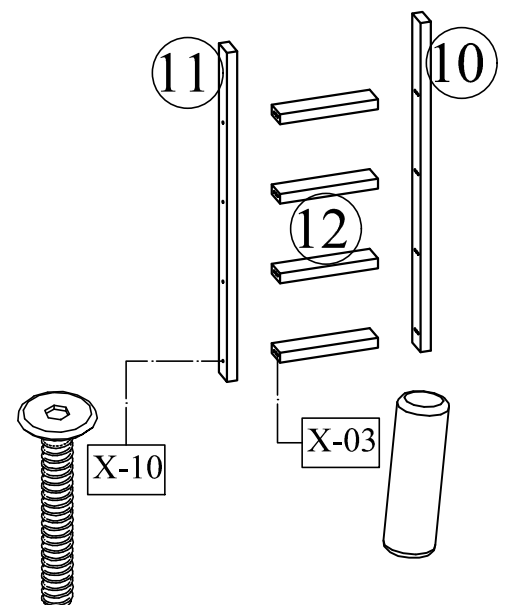

X-10

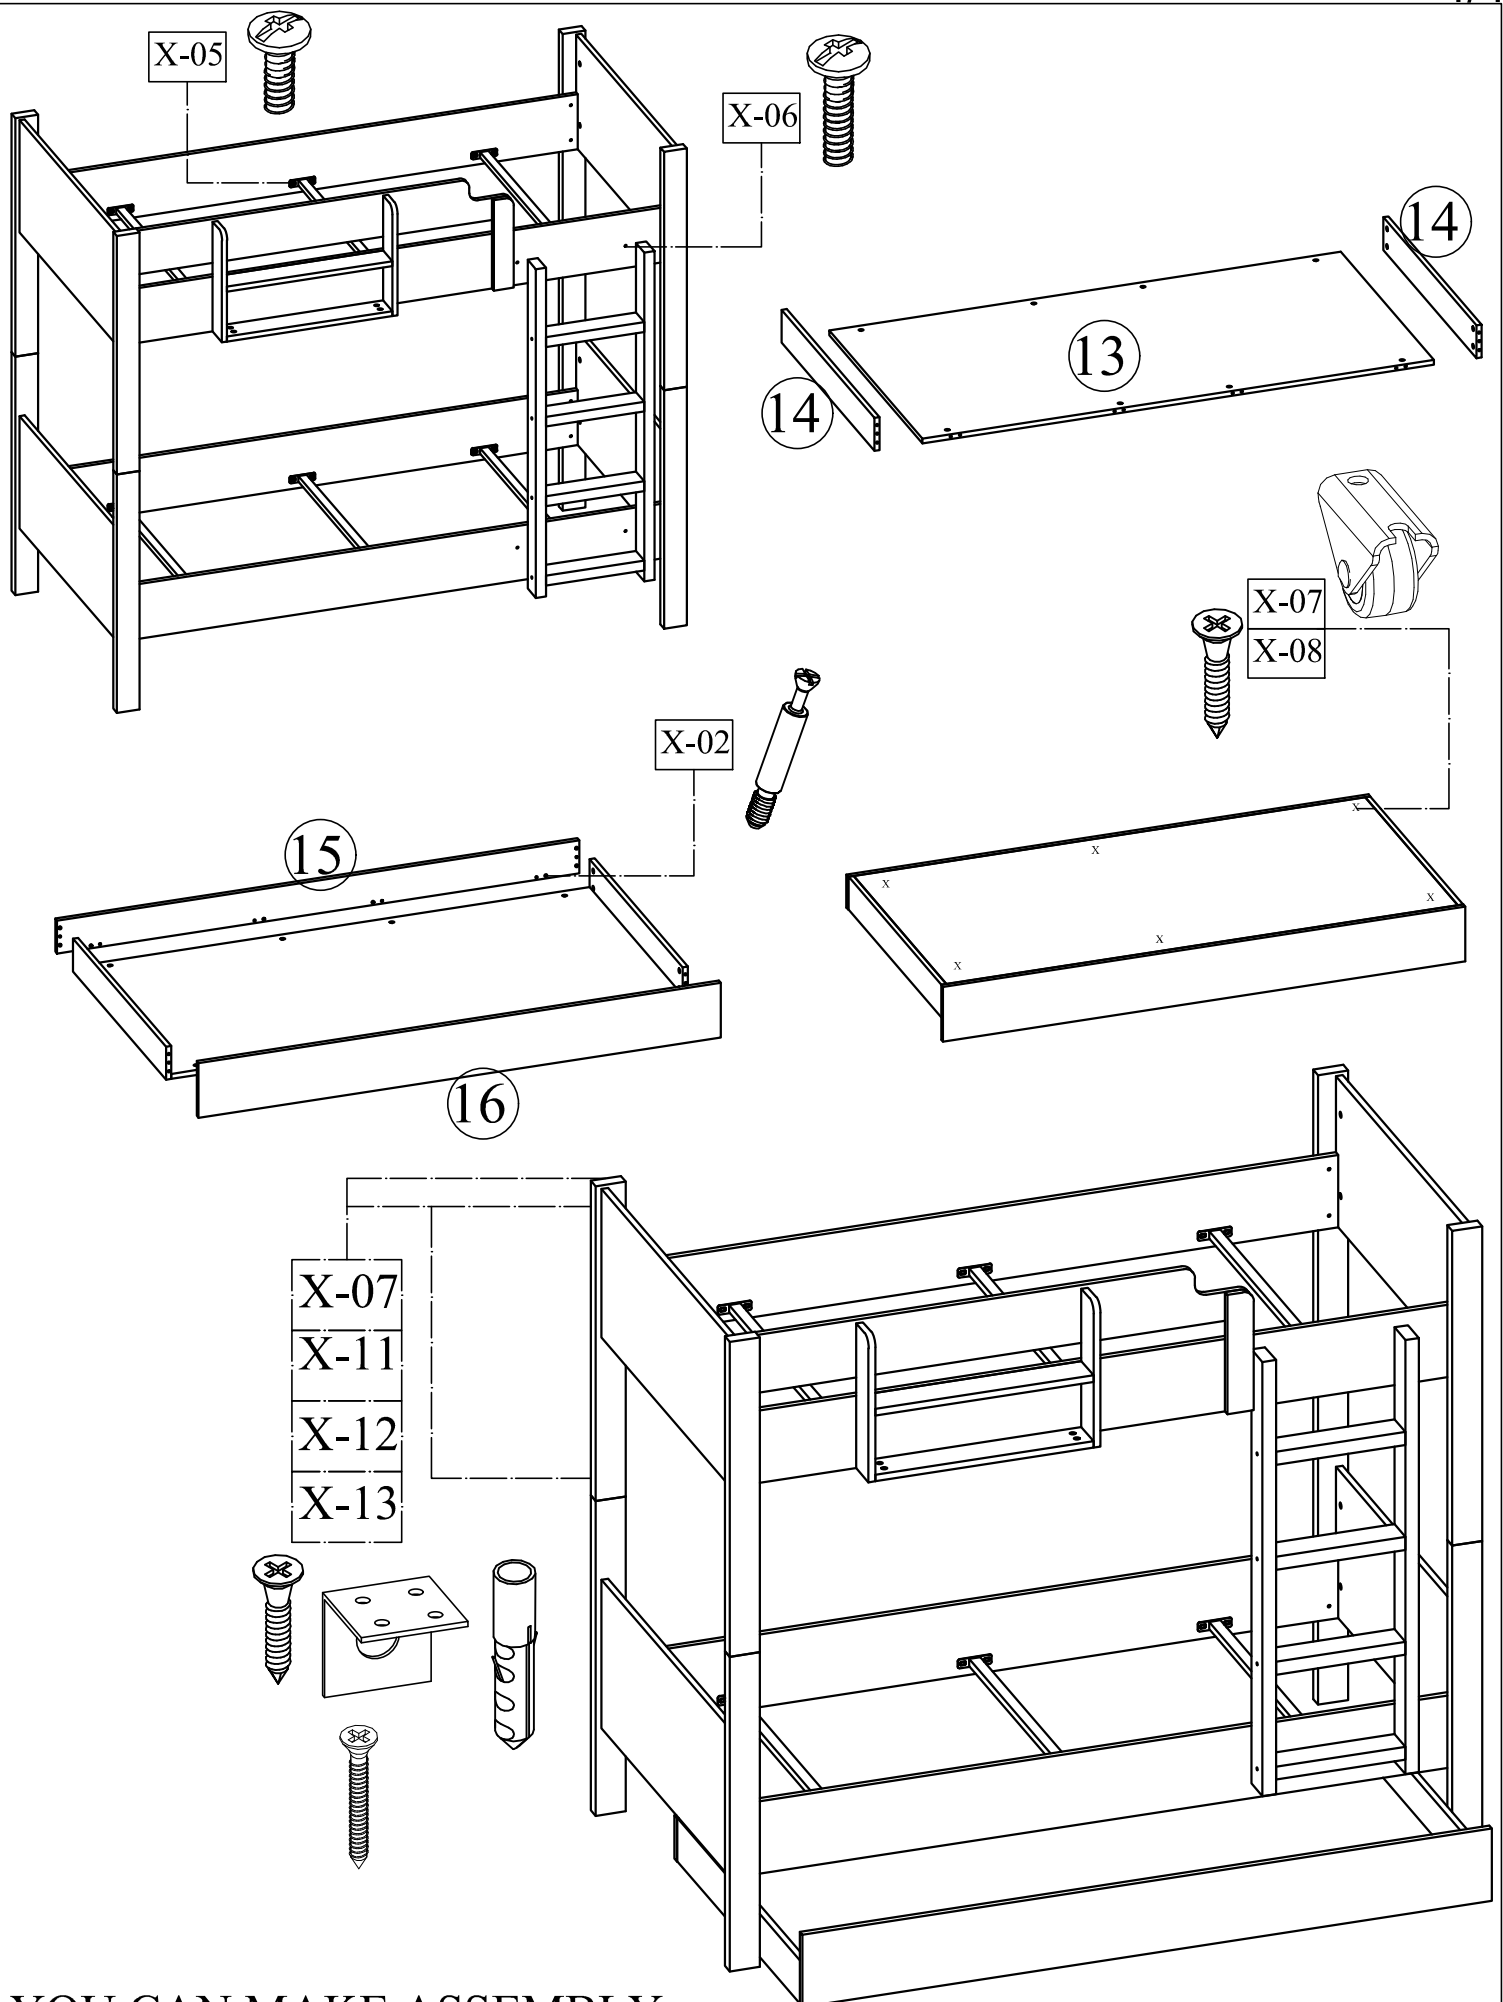

YOU CAN MAKE ASSEMBLY
WITH X-11 CORNER SPARE
PART IN LIKE THIS POINT